INSPECTION / VENT PORT

DETAIL # 4

MAINTENANCE PORT

THIS PORT IS USED TO PUMP WATER INTO THE SYSTEM AND RESUSPEND ACCUMULATED SEDIMENT SO THAT IT MAY BE PUMPED OUT. MINIMUM REQUIRED MAINTENANCE INCLUDES A QUARTERLY INSPECTION FOR THE FIRST YEAR OF OPERATION AND A YEARLY INSPECTION THEREAFTER. FLUSH AS NEEDED

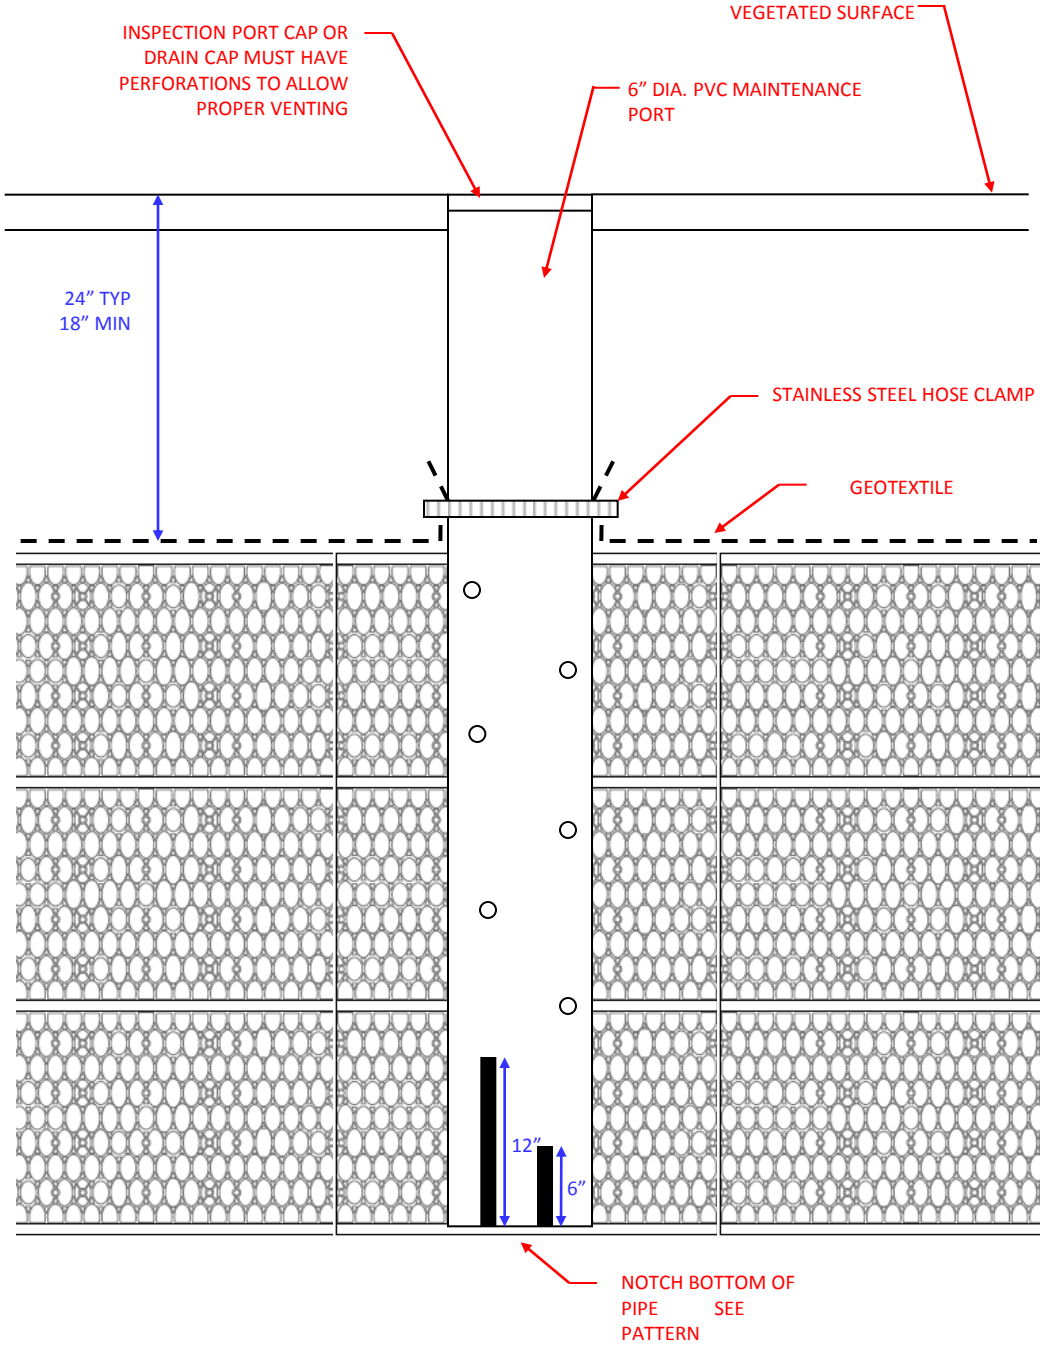

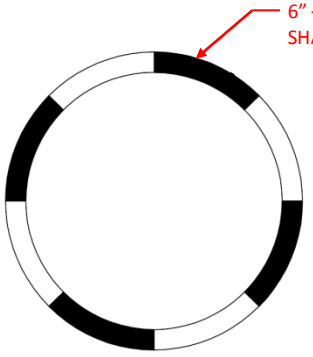

FOR ADDITIONAL INFORMATION CONTACT CONSTRUCTION ECOSERVICES
P: 832.456.1000 • WWW.ECOSVS.COM • F: 832.456.1010